

PUSH VIDEO

MEGAPIXEL WIRELESS NETWORK CAMERA SERIES

OPERATION GUIDE

alarm shop

Please read instructions thoroughly before operation and retain it for future reference.

IMPORTANT SAFEGUARD



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly “lead-free” and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.



This apparatus is manufactured to comply with the radio interference requirements.

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital service, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 - FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
 - All external cables connecting to this basic unit must be shielded.
- For cables connecting to PCMCIA cards, see the option manual or installation instructions.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

DGT Warning Statement

Article 12 Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

Article 14 The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improvement is made and the interference no longer exists.

Trademark Acknowledgements

iPad® & iPhone® are the registered trademarks of Apple Inc.

Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Microsoft®, Windows® & Internet Explorer® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Disclaimer

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

This product doesn't have a standby / off mode.

MPEG4 Licensing

THIS PRODUCT IS LICENSED UNDER THE MPEG4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

GPL Licensing



This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License ("GPL") or the GNU Lesser Public License ("LGPL").

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

<http://download.dvrtw.com.tw/GPL/PCAM/F-Series/linux.tar.gz>

alarm shop

TABLE OF CONTENTS


1. OVERVIEW.....	1
1.1 Product Features.....	1
1.2 Package Content.....	1
1.3 Product Overview	1
1.4 Rear Panel	2
1.5 External I/O Port.....	2
1.6 Status Indicator.....	2
1.7 Micro SD Card.....	3
2. CAMERA ACCESS WITH INTERNET EXPLORER.....	4
2.1 Camera Login.....	4
2.2 Control Panel Overview	4
2.3 Digital PTZ (DPTZ) Operations	6
2.4 Event Record Search & Playback	6
3. CAMERA CONFIGURATIONS.....	8
3.1 System configuration menu.....	8
3.2 Network	9
3.2.1 Network	9
3.2.2 QoS	9
3.2.3 Wireless.....	9
3.2.4 DDNS	10
3.2.5 SNTP	10
3.2.6 FTP	10
3.2.7 MAIL	11
3.2.8 Filter	11
3.2.9 UPnP / Bonjour.....	12
3.3 Camera	13
3.3.1 Camera.....	13
3.3.2 Video	13
3.3.3 Color	14
3.3.4 Audio	14
3.3.5 LED	14
3.3.6 Advanced.....	15
3.4 Record.....	15
3.4.1 Record.....	15
3.4.2 Record Timer.....	16
3.5 Storage	16
3.5.1 Memory	16
3.6 Trigger	17
3.6.1 Trigger	17
3.6.2 Push Video	18
3.7 General	19
3.7.1 General.....	19
3.7.2 Time.....	19
3.7.3 Server Log.....	20
3.7.4 Online	20
3.7.5 Account.....	21
3.7.6 Maintenance.....	21
APPENDIX 1 PRODUCT SPECIFICATIONS.....	23
APPENDIX 2 BIT RATE TABLE FOR REFERENCE	24
APPENDIX 3 MICRO SD CARD COMPATIBLE LIST	26
APPENDIX 4 Q&A	27
APPENDIX 5 RECORDING TIME TABLE	28

1. OVERVIEW

1.1 Product Features


- Easy **network setup** with your **iPhone / iPad**
- Network access via either **wireless IEEE 802.11b/g/n** connection or a **wired Ethernet** connection to provide flexible installation options
- **Interchangeable antenna** – easy to improve wireless signal and expand its range
- **1.3 Megapixel** with **HDTV 720p** quality, allowing users to notice minor details more easily
- **Push Video** support to send an event notification to your iPad, iPhone and Android mobile device immediately once the specified event type is triggered, and play video recording once you confirm the receipt
- **White LED** built-in to illuminate the scene manually, scheduled by a timer, or triggered by an alarm or a motion event
- **External alarm I/O device** connection
- Microphone & speaker built-in for **two-way audio transmission**
- **Remote Surveillance**
 - Fully compatibility on **iPhone, iPad & Android** mobile devices, and **Internet Explorer®** on Windows® operating system
- (Model 1 Only) Micro SD card support for **video storage**

1.2 Package Content

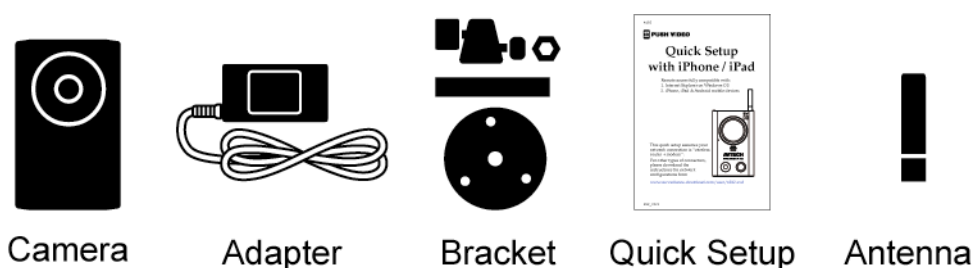

Note: If you find Wi-Fi connection is weak, replacing the supplied antenna could be an alternative to improve wireless signal. Please be advised that the antenna you choose should meet the required specifications: (1) IEEE802.11b/g/n 2.4Ghz Wireless Network. (2) Antenna with reverse-SMA male connector.

1.3 Product Overview

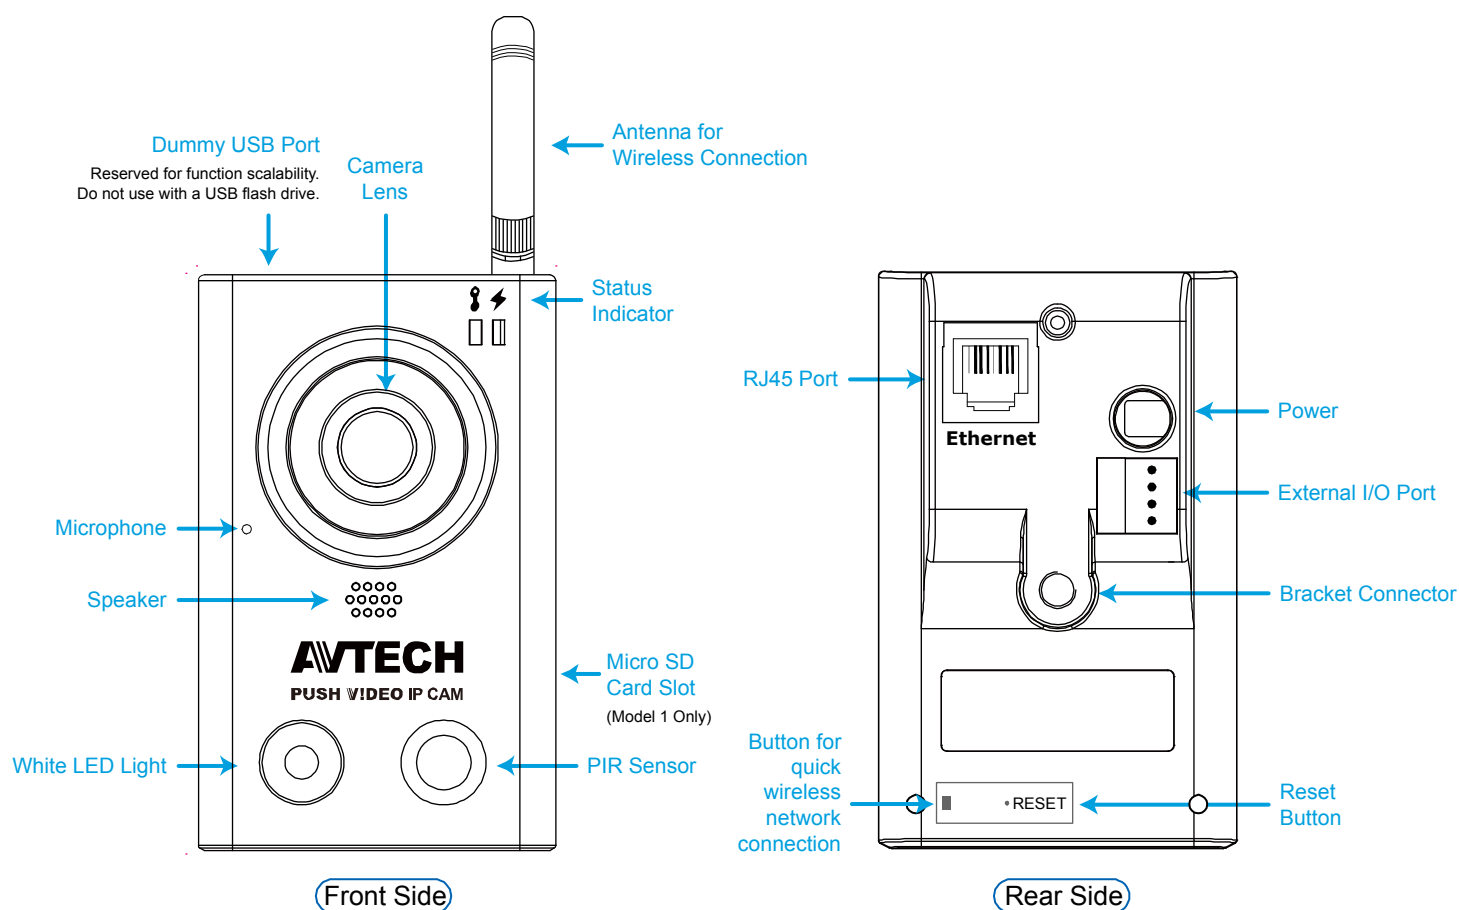

1.4 Rear Panel

RJ45 Port:	Connect your network cable.
Power:	Connect the supplied regulated power supply.
External I/O Port	A 4-pin I/O terminal is supplied with the camera for external alarm device connection. For details, please refer to “1.5 External I/O Port” at page 2.
Reset Button:	With the power connected, press to reset all parameters, including the IP address to factory default settings. The camera will reboot after default reset. Please do not disconnect your camera during the reset process.
Button for quick wireless network connection:	Used to quickly connect to your wireless network with simply one press if your wireless router also supports this function. For details, please check the user manual of your wireless router, and the instructions in the printed “Quick Setup” supplied with the camera.


1.5 External I/O Port

This camera supports external I/O device connection, and a 4-pin I/O terminal is supplied with this camera for easy connection.

Below shows which input on the I/O terminal you should use for wiring when you want to connect an external device to this camera.



4-pin I/O Terminal

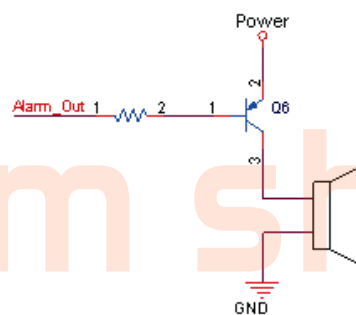

Alarm Out Connection

1.6 Status Indicator

ICON	 LAN connection status	 Internet connection status
System Status		
During powering on	Always on	Always on
Reset default	Blinking (on 250 ms, off 250 ms) ●○○●○○●○○●	Always off
Upgrade	Blinking (on 250 ms, off 250 ms) ●○○●○○●○○●	Blinking (on 250 ms, off 250 ms) ●○○●○○●○○●
Connection Status		
LAN connected	Always on	--
LAN disconnected	Blinking (on 100 ms, off 500 ms) ●○○●○○●○○●	--
Internet connected	--	Always on
Internet disconnected	--	Blinking (on 100 ms, off 500 ms) ●○○●○○●○○●
Network Setup Incomplete		
Port forwarding required	--	Blinking (on 5 sec, off 0.5 sec, on 0.5 sec, off 0.5 sec, on 5 sec) ●●●●○○●●●●

* LED blinking frequency - ● LED on / ○ LED off

1.7 Micro SD Card


For local video recording, a micro SD card slot can be found on the side of the camera.

Note: Before inserting a micro SD card, make sure you’ve copied all important data saved in the card (if any) to other storage media, or the data will be removed after inserting it to the camera.

With the golden contact toward the slot, slightly push and insert the optional micro SD card to the slot, as indicated on the right.

Note: It’s recommended to insert or remove the micro SD card with power disconnected, or the camera will reboot.

Note: For the compatible list of the micro SD card, please refer to “APPENDIX 3 MICRO SD CARD COMPATIBLE LIST” at page 26.

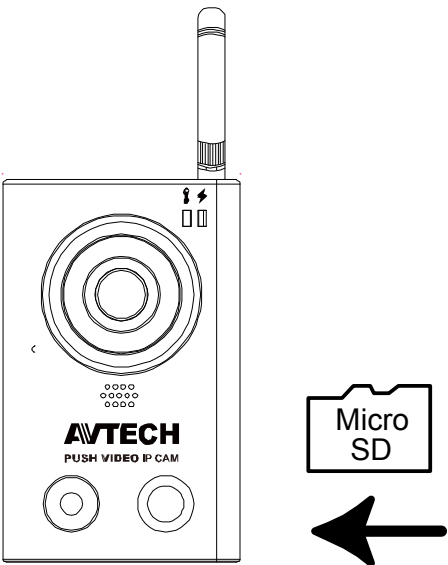

alarm shop

2. CAMERA ACCESS WITH INTERNET EXPLORER

This network camera can be accessed via Microsoft® Internet Explorer® and iPhone® / iPad® / Android™ mobile devices with our self-developed program “EagleEyes” installed depending on different using situations.

Note: For details about accessing network cameras via iPhone / iPad / Android mobile devices, please refer to <http://www.eagleeyescctv.com>.

Before using the camera, make sure you have configured the network settings, and the network connection is fine.

For network configurations, please refer to:

- **“Quick Setup With iPhone / iPad”** supplied with your camera if you’re using iPhone / iPad, and your network environment is wireless.
- **“ADVANCED NETWORK SETUP”** downloadable from www.surveillance-download.com/user/n812.swf if your network environment is not wireless.

2.1 Camera Login

Step1: Open your web browser, and key in <http://ipaddress:portnum> in the URL address box.

For example, for the IP address 60.121.46.236 and port number 888, please key in “<http://60.121.46.236:888>” into the URL address box, and press “Enter”.

Step2: In the login page, key in the user name and password, and enter the security code from the image below if any. Then, click “LOGIN”.

Step3: The wizard is then started.


- To skip the wizard and directly access the camera live view, click “Close”.
- To directly access the camera live view without starting the wizard for the login next time, check “Do not start wizard at login”.

Note: If you’re prompted to install “VLC player”, “Software” or “H264 Streaming Viewer”, please agree to proceed the installation. Or, you might not be able to see the live view properly.

Step5: When the login is successful, the live view is shown.

2.2 Control Panel Overview

Note: The buttons available may depend on the models you have and the user level used to log in.

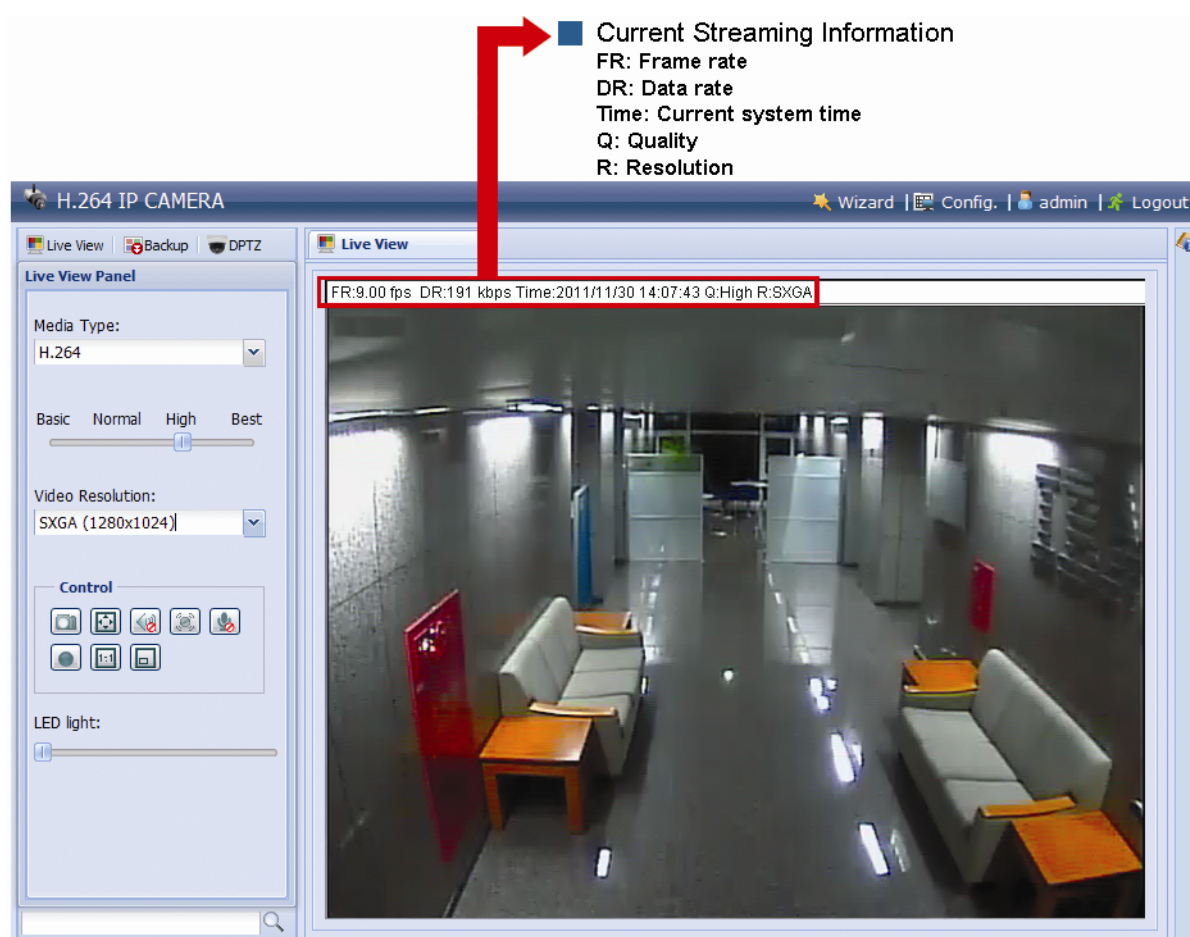


Function	Icon	User Level	Description
Live		Supervisor / Power User / Normal User / Guest	Switch to the live view page.
DPTZ		Supervisor / Power User / Normal User	Switch to the DPTZ configuration page. For details, please refer to “2.3 Digital PTZ (DPTZ) Operations” at page 6.
Backup		Supervisor / Power User	Enter the event record list for video playback. For details, please refer to “2.4 Event Record Search & Playback” at page 6.
Config.		Supervisor	Switch to the system configuration page, and the functions available for “Supervisor” and “Power User” are different. For details, please refer to “3.1 System configuration menu” at page 8.
Media Type	--	Supervisor / Power User / Normal User / Guest	Select the image player from the drop-down list: ■ H.264 / MPEG-4 / Motion JPEG ■ QuickTime QuickTime is Apple Inc.'s multimedia software. You need to have QuickTime installed in your operating system before selecting “QuickTime”. When it is selected, you will be promoted to enter the user name and password to access the camera. ■ VLC
Quality	--	Supervisor / Power User / Normal User	Click & drag the slider to select the video quality: Basic / Normal / High / Best.
Video Resolution	--	Supervisor / Power User / Normal User	Select the image resolution from the drop list: ■ SXGA (1280 x 1024) ■ HD720P (1280 x 720) ■ QVGA (320 x 240) ■ VGA (640 x 480)
Live View Size:		Supervisor / Power User / Normal User	
Normal Size			The current live view size is the same as the selected resolution.
Fit to screen			The selected resolution is resized to fit into the current live view size. <i>This icon doesn't work when the selected resolution is VGA or QVGA.</i>
Scale			Click and hold the movable square on the left bottom corner of the live view to move <i>This icon appears only when the selected resolution is larger than the current live view size.</i>
CIF Resize			The QVGA resolution is resized to fit into the current live view size. <i>This icon appears only when the selected resolution is QVGA (CIF).</i>
Snapshot		Supervisor / Power User / Normal User	Click to take a snapshot of the current view on a new window. Right click on the picture and re-save it to the location you want.
Full Screen		Supervisor / Power User / Normal User	Click to display the image in full screen. To exit the full screen mode, press “Esc” on your keyboard.
Audio On / Off		Supervisor / Power User / Normal User	Click to switch the audio-in on / off.
Alarm Out		Supervisor / Power User / Normal User	Click to force the connected alarm-out device to work. For example, when your alarm device is a buzzer, click this button and your buzzer will start to sound even if there's no alarm event. <i>If no alarm-out device is connected, the internal buzzer of the camera will start to sound.</i>
Microphone		Supervisor	Click to switch the audio-out on / off.
Record On / Off		Supervisor / Power User / Normal User	Click to start / stop video recording. A micro SD card must be inserted for this function to work properly.
LED Light	--	Supervisor / Power User / Normal User	Click and drag the slider to adjust the brightness of the LED light. <i>When the brightness level is adjusted to 100%, the system will enable the brightness of 100% for 3 minutes, reduce to 50% for 1 minute, and return to 100% for 3 minutes, etc. This is to protect and extend the lifetime of the white LED.</i>

2.3 Digital PTZ (DPTZ) Operations

This camera has PTZ capability, i.e. digital PTZ (hereafter called “DPTZ”), for wide area monitoring.

STEP1: Click “DPTZ” to show the DPTZ control panel.

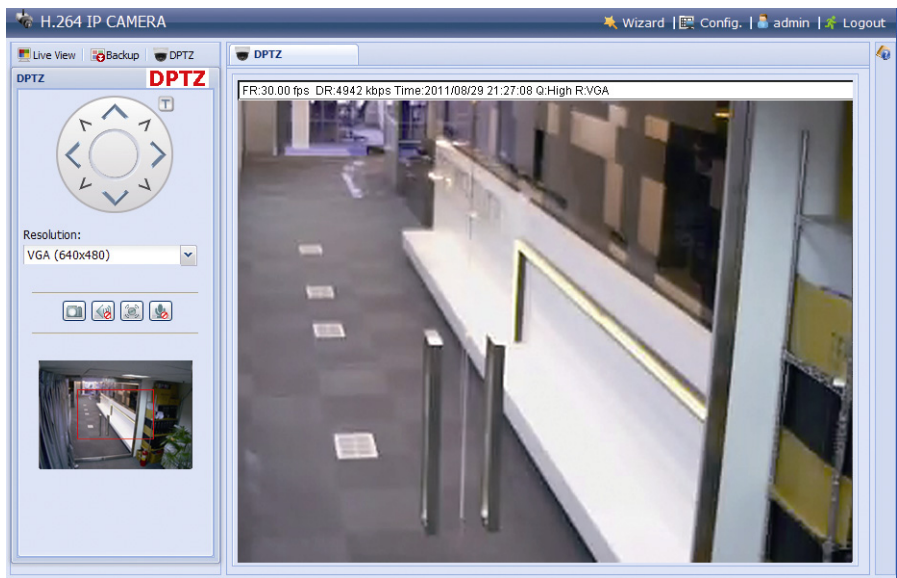


STEP2: Select the functions when needed:

FUNCTION	ICON	DESCRIPTION
Resolution	--	Select the video resolution for the DPTZ function. Only “VGA” and “QVGA” are available.
Take snapshots		Click to take a snapshot of the current view on a new window. Right click on the picture and re-save it to the location you want.
Audio On / Off	/	Click to switch the audio-in on / off.
Alarm Out		Click to force the connected alarm-out device to work. For example, when your alarm device is a buzzer, click this button and your buzzer will start to sound even if there's no alarm event. <i>If no alarm-out device is connected, the internal buzzer of the camera will start to sound.</i>
Microphone	/	Click to switch the audio-out on / off. <i>Available only when you're a “Supervisor”.</i>

2.4 Event Record Search & Playback

This camera can only save up to three alarm recordings. To save more recorded data, it's recommended to use this camera with a compatible NVR.

Note: It's available for Model 1 to insert a compatible micro SD card to extend video storage.
To know how and where to insert a micro SD card, please refer to “1.7 Micro SD Card” at page 3.
To know the compatible list of micro SD cards, please refer to “APPENDIX 3 MICRO SD CARD COMPATIBLE LIST” at page 26.

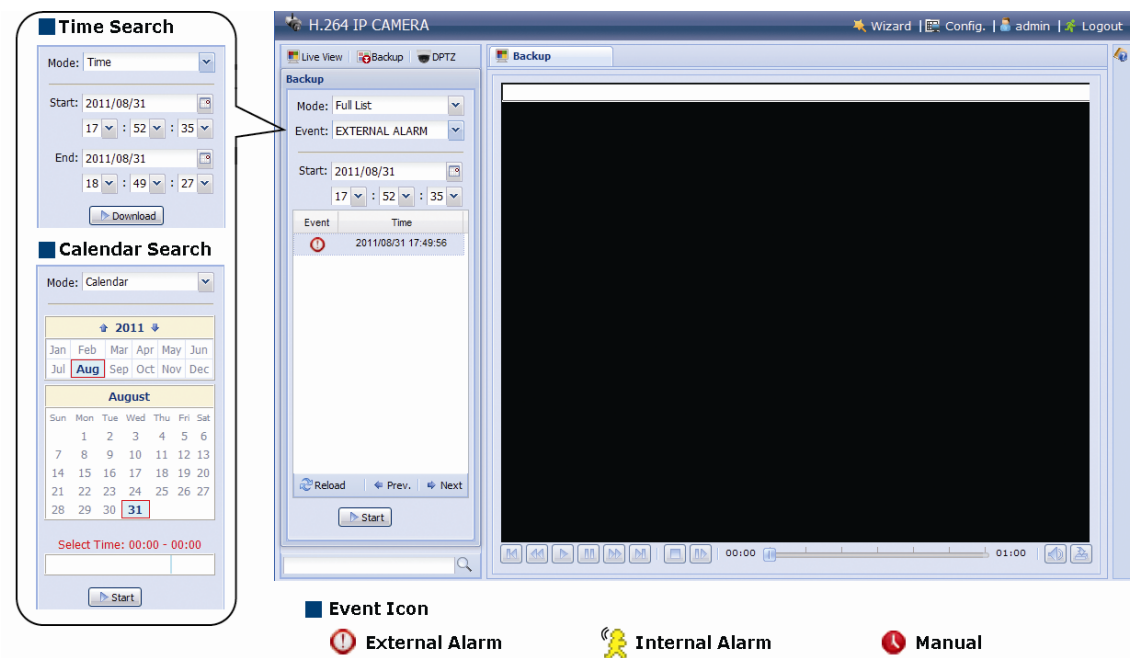

	Previous / Next Hour	Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.
	Fast Forward	Increase the speed for fast forward. Click to get 2X, 4X, 8X & 16X speed forward eventually.
	Fast Rewind	Increase the speed for fast rewind. Click to get 2X, 4X, 8X & 16X speed rewind eventually.
	Play	Click to play the current video clip.
	Pause	Click to pause the video playback.
	Stop	Click to stop the video playback.
	Step	In the pause mode, click to get one frame forward.
	Audio	Click to mute the playback if necessary, and click again to restore.
	Download	Click to download the current video clip to the specified path in your PC. <i>The downloaded video can only be opened by our own video player. Please go to "General" → "Maintenance" to download the video player, or get the player from the CD supplied with the sales package.</i>

alarm shop

3. CAMERA CONFIGURATIONS

Users can further configure this network camera by accessing via Internet Explorer.

3.1 System configuration menu

Click “Config.” to enter the configuration page.

Note: You need to be “Supervisor” to enter the system configuration page. If not, please re-log into the camera with the supervisor user level.

The functions are categorized into six menus: Network, Camera, Record Timer, Storage, Trigger and General.

- For details about “Network”, please refer to “3.2 Network” at page 9.
- For details about “Camera”, please refer to “3.3 Camera” at page 13.
- For details about “Record”, please refer to “3.4 Record” at page 15.
- For details about “Storage”, please refer to “3.5 Storage” at page 16.
- For details about “Trigger”, please refer to “3.6 Trigger” at page 17.
- For details about “General”, please refer to “3.7 General” at page 18.

Main Menu	Sub-Menu	Reference
Network	Network	Configure network settings.
	QoS	Limit the data flow for live streaming.
	Wireless	Configure the camera to connect to your wireless network.
	DDNS	Enter DDNS information when the network type is PPPOE or DHCP.
	SNTP	Synchronize your camera time with the networked computer systems.
	FTP	Enter the FTP information for event notifications when “FTP” is chosen in “Trigger” → “Trigger”.
	Mail	Enter Email information for event notifications when “Email” is chosen in “Trigger” → “Trigger”.
	Filter	Choose to permit or block the IP address(es) which can access this camera.
	UPnP	<i>*Suitable for Windows-based operating system.</i> Allow this camera to be detected among devices within the same network area for easy and quick usage.
	Bonjour	<i>*Suitable for Apple Mac-based operating system.</i> Allow this camera to be detected among devices within the same network area for easy and quick usage.
Camera	Camera	1. Set the camera title. 2. Specify the display position of the camera title.
	Video	Adjust video-related settings in different video format.
	Color	Adjust the color performance.
	Audio	Adjust the audio volume of the microphone and speaker.
	LED	1. Set if the LED light will be activated automatically when the monitoring area is dark. 2. Schedule when the LED light will be activated.
	Advance	Adjust the camera parameters if necessary.
Record	Record	Configure the record function.
	Record Timer	1. Enable and schedule the record timer for external alarms. 2. Enable and set the record duration in second for human detection events.
Storage	Memory	Check the current storage capacity and clear all recorded data when needed.
Trigger	Trigger	1. Enable / disable the motion detection. 2. Set the motion detection area. 3. Configure how the camera reacts for any event.
	Push Video	1. Set Push Video rules. 2. Enable and schedule when to enable Push Video.


Main Menu	Sub-Menu	Reference
General	General	1. Select the language of the web browser. 2. Check the MAC address of the camera. 3. Lock camera access after the specified time. 4. Enable or disable LED status indication.
	Time	Set daylight saving time and the current time.
	Server Log	Check the system event logs.
	Online	Check the current online user(s).
	Account	1. Create a new user account with different access privilege. 2. Modify or delete an existing user account.
	Maintenance	1. Check the current firmware version and upgrade your camera. 2. Copy system configurations. 3. Reboot the camera. 4. Download the video player to play the recorded data.

3.2 Network

3.2.1 Network

You can set the network configuration of the network camera depending on your network type.

For details, please refer to “Advanced Network Setup” from www.surveillance-download.com/user/n812.swf.

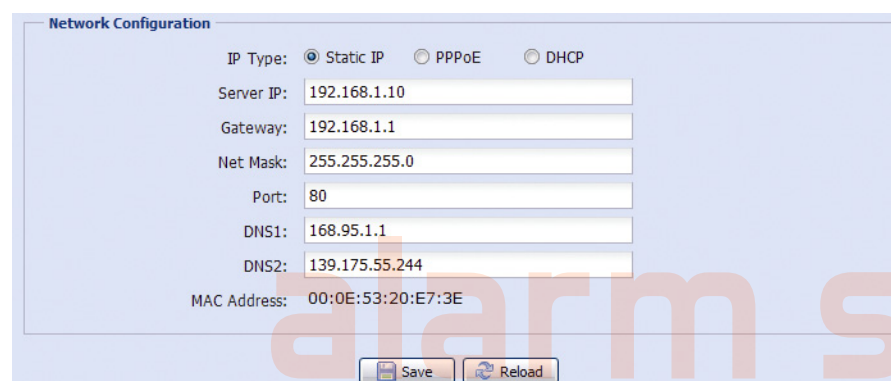


The Network Configuration page shows settings for IP Type (Static IP selected), Server IP (192.168.1.10), Gateway (192.168.1.1), Net Mask (255.255.255.0), Port (80), DNS1 (168.95.1.1), DNS2 (139.175.55.244), and MAC Address (00:0E:53:20:E7:3E). It includes Save and Reload buttons.

3.2.2 QoS

QoS, Quality of Service, is the ability to control the data flow for real-time streaming. This function is important if your network bandwidth is insufficient and you have other devices to share the network bandwidth.

Check “QoS Enable”, and set the max. upload rate from 256 to 10240 kbps.

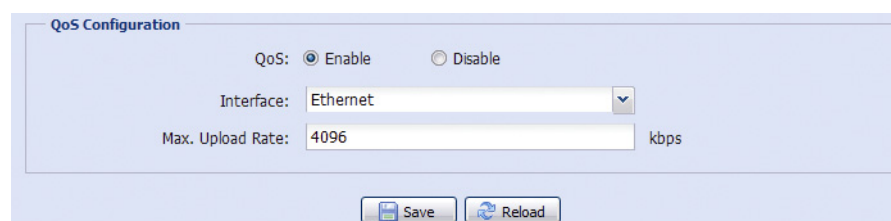


The QoS Configuration page shows QoS set to Enable, Interface set to Ethernet, and Max. Upload Rate set to 4096 kbps. It includes Save and Reload buttons.

3.2.3 Wireless

Configure the camera to connect to your wireless network if you’re not using the quick wireless network connection function. For details, please refer to “Advanced Network Setup” downloadable from

www.surveillance-download.com/user/n812.swf.

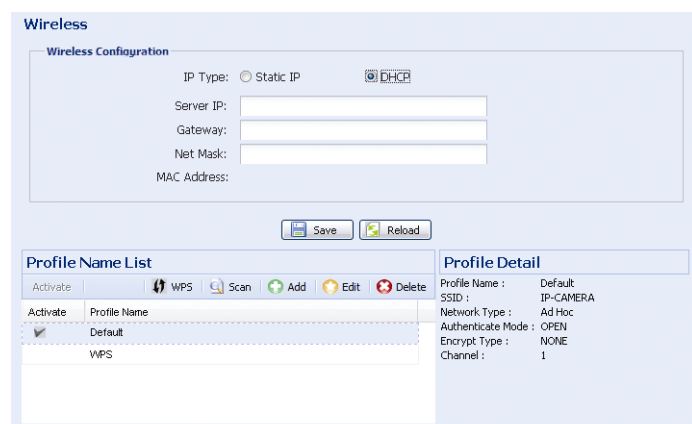

The Wireless Configuration page shows IP Type set to DHCP. Below it is a Profile Name List table with columns for Activate, Profile Name, and buttons for WPS, Scan, Add, Edit, and Delete. The table lists 'Default' and 'WPS' profiles. To the right is a Profile Detail section showing settings for Profile Name, SSID, Network Type, Authenticate Mode, Encrypt Type, and Channel.

3.2.4 DDNS

Select “On” when the selected network type in “Network” is “PPPOE” or “DHCP”.

For details, please refer to “Advanced Network Setup” from www.surveillance-download.com/user/n812.swf.

DDNS Configuration

DDNS: ☒ Enable ☐ Disable

System Name: eagleeyes

Hostname: MAC000E5320E73E .ddns.eagleeyes.tw

E-Mail:

Save Reload

3.2.5 SNTP

SNTP (Simple Network Time Protocol) is used to synchronize your camera time with the networked computer systems.

SNTP Configuration

GMT: (GMT+08:00) Taipei

NTP Server: tock.stdtime.gov.tw

Sync. Period: Daily

Server Time: 2011-08-30 20:34:42

Sync.

Save Reload

Function	Description
GMT	Once users choose the time zone, the network camera will adjust the local area time of the system automatically.
NTP Server	Simply use the default SNTP server (For example, tock.stdtime.gov.tw) or change to another server with which users are familiar.
Sync. Period	Select “Daily” to synchronize the camera time with the network time every day or “None” to turn off this function.
Sync	Click and the network camera will synchronize the time with the network time.

3.2.6 FTP

Enter the detailed FTP information and click “Save” to confirm. The information you set here will be applied when “FTP” is selected in “Trigger” → “Trigger”.

FTP Configuration

Username: manager

Password:

Server: 321.382.12.99


Port: 21

Directory: upload

Save Test Reload

3.2.7 MAIL

Enter the detailed e-mail information and click “Save” to confirm. The information you set here will be applied when “Email” is selected in “Trigger” → “Trigger”.

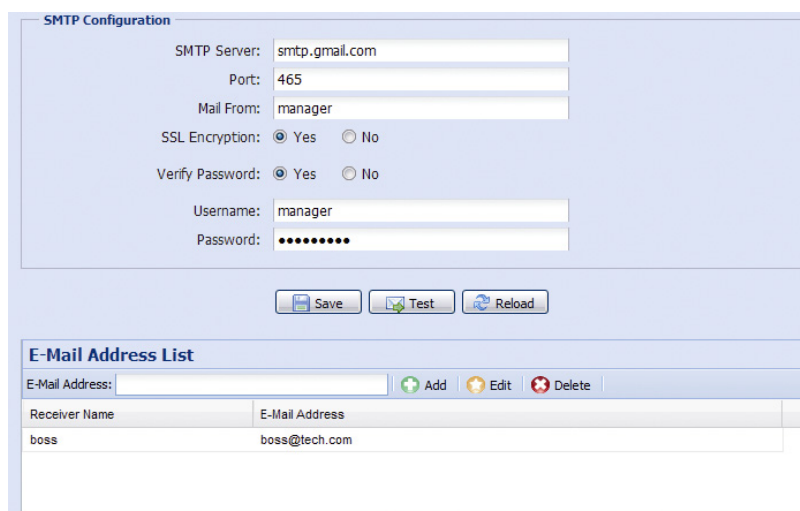


The image shows a web interface for email configuration. The top section, titled "SMTP Configuration", contains fields for SMTP Server (smtp.gmail.com), Port (465), Mail From (manager), SSL Encryption (Yes), Verify Password (Yes), Username (manager), and Password (masked with dots). Below these are buttons for Save, Test, and Reload. The bottom section, titled "E-Mail Address List", has an "E-Mail Address:" input field and buttons for Add, Edit, and Delete. A table below lists the email addresses with columns for Receiver Name and E-Mail Address. The table contains one entry: "boss" and "boss@tech.com".

Function	Description
SMTP Server	Enter the SMTP server address provided from your e-mail system supplier.
Port	Enter the port number provided from your e-mail system supplier. If this column is left blank, the e-mail server will use port 25 to send e-mails.
Mail From	Enter the name of the sender.
SSL Encryption	Select “Yes” if your e-mail server is using SSL encryption to protect your e-mail content from unauthorized access.
Verify Password	Some mail servers are required to verify the password. Please enter the “user name” and “password”.
E-Mail Address List	Add the e-mail address(s) of the assigned recipient(s).
Test	When all information is entered, click “Test Mail” to try if the receipt.

3.2.8 Filter

Choose to permit or block the IP address(es) which can access this camera, and click “Save” to confirm.

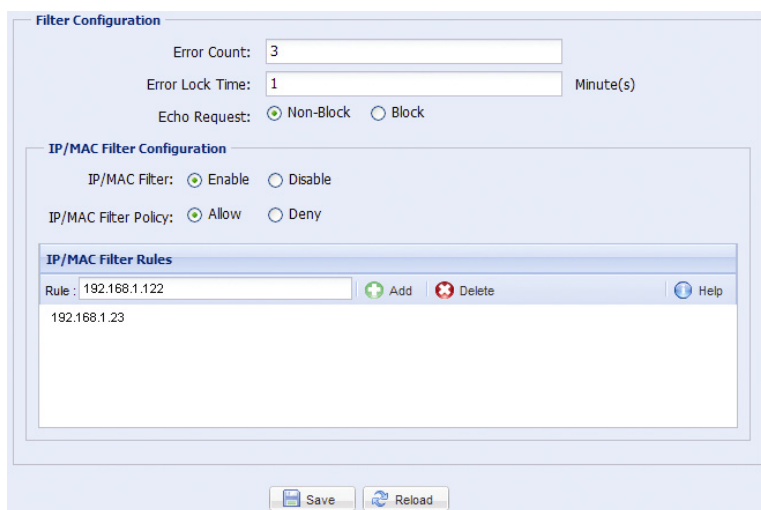

The image shows a web interface for filter configuration. The top section, titled "Filter Configuration", contains fields for Error Count (3), Error Lock Time (1 Minute(s)), and Echo Request (Non-Block). Below these are buttons for Save and Reload. The bottom section, titled "IP/MAC Filter Configuration", contains fields for IP/MAC Filter (Enable) and IP/MAC Filter Policy (Allow). Below these are buttons for Add, Delete, and Help. A table below lists the IP/MAC Filter Rules with columns for Rule and Action. The table contains one entry: "192.168.1.122" and "192.168.1.23".


Function	Description
■ Filter Configuration	
Error Count	Set the maximum count for login failure. When the maximum count is reached, the IP address trying to access the network camera will be locked.
Error Lock Time	Set the lock time in minutes when the maximum count of error login for an IP address is reached.
Echo Request	Select “Non-Block” to allow other users to use the ping command to detect the IP address of your network camera, or “Block” to deny the ping command request.
■ IP/MAC Filter Configuration	
IP/MAC Filter	Choose to enable or disable the filter function.
IP/MAC Filter Policy	If “Enable” is selected, choose whether you want to permit (Allow) or block (Deny) the IP address list below.
■ IP/MAC Filter Rules	
Rule	- To add an item to the IP address list, key in the IP address in “Rule”, and click “Add”. - To remove an existing item in the IP address list, click the item you want to remove, and click “Delete”.

3.2.9 UPnP / Bonjour

“UPnP” stands for “Universal Plug and Play”, which allows devices to connect seamlessly in the home and corporate environments and simplify installation of computer components, and is only suitable for Microsoft Windows-based operating system.


“Bonjour” functions the same as “UPnP”, but it’s only suitable for Apple Mac-based operating system.

➤ UPnP

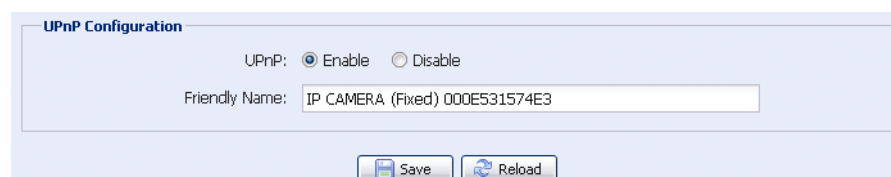

The UPnP Configuration interface shows a title bar 'UPnP Configuration'. Below it, there are two radio buttons: 'UPnP: Enable' (selected) and 'Disable'. Underneath, there is a text field labeled 'Friendly Name:' containing the text 'IP CAMERA (Fixed) 000E531574E3'. At the bottom, there are two buttons: 'Save' and 'Reload'.

➤ Bonjour

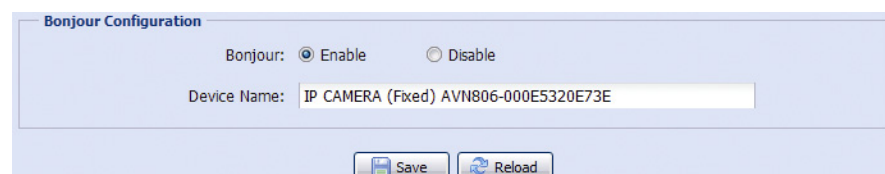

The Bonjour Configuration interface shows a title bar 'Bonjour Configuration'. Below it, there are two radio buttons: 'Bonjour: Enable' (selected) and 'Disable'. Underneath, there is a text field labeled 'Device Name:' containing the text 'IP CAMERA (Fixed) AVN806-000E5320E73E'. At the bottom, there are two buttons: 'Save' and 'Reload'.

Check “Enable” to allow the network camera to be detected among devices within the same network area, and set the identification name of the camera in “Friendly name”.

When this function is activated, the other PC within the same domain as this camera will be able to search this camera in:

- “Network Neighbor” with the identification name set in “Friendly name” for Windows-based PC, or
- “” (finder) or “Bookmark” with the identification name set in “Device Name” for Mac-based PC.

Double-click it to quickly open the web browser for camera access.


Port Mapping (Available only in UPnP)

This function can eliminate the need to additionally access the router for port forwarding.

For details, please refer to “Advanced Network Setup” from www.surveillance-download.com/user/n812.swf.

Note: Before using this function, make sure your router supports UPnP, and this function is enabled. If not, please access your router additionally for port forwarding.

When “Port Mapping” is set to “Enable”, the system will automatically assign an IP address or port number for you if no IP address or port number is entered.

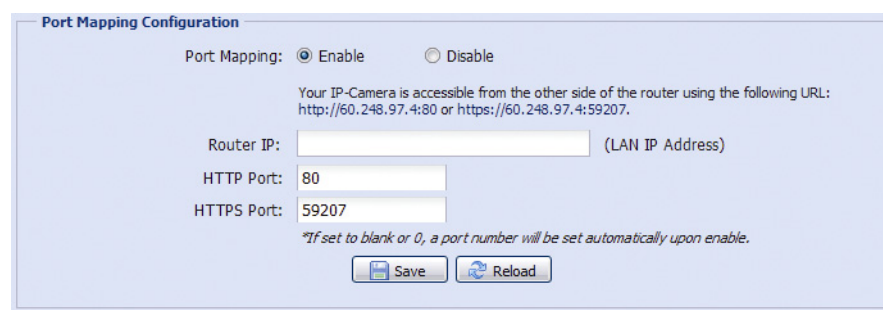

The Port Mapping Configuration interface shows a title bar 'Port Mapping Configuration'. Below it, there are two radio buttons: 'Port Mapping: Enable' (selected) and 'Disable'. Underneath, there is a text area containing the text: 'Your IP-Camera is accessible from the other side of the router using the following URL: http://60.248.97.4:80 or https://60.248.97.4:59207.' Below this, there are three text fields: 'Router IP:' (with '(LAN IP Address)' to its right), 'HTTP Port:' (containing '80'), and 'HTTPS Port:' (containing '59207'). At the bottom, there are two buttons: 'Save' and 'Reload'. A small note at the bottom reads: '*If set to blank or 0, a port number will be set automatically upon enable.'

Note: When the configurations are saved successfully, you’ll see a message indicating the IP address and port number assigned to this network camera.

3.3 Camera

3.3.1 Camera

In this menu, you can set the camera title, and specify where to display this title on the display.

Camera

Camera Configuration

Title: IPCAM

Position: DOWN-RIGHT

Save

Reload

3.3.2 Video

Adjust video-related settings in different video format.

- “Quality” is related to image clearness.
- “FPS” is related to the fluency of the video. The more the FPS, the more fluent the video.
- “Max Bit Rate” is the maximum limitation of data transmission in the selected image format and resolution.

Note: QQVGA is for mobile surveillance.

Video Configuration

Configuration

Power Line Frequency: 60 Hz

H264

Resolution	Quality	FPS	Max Bit Rate
SXGA / HD720P	HIGH	30	5000
VGA	HIGH	30	3000
QVGA	HIGH	30	3000
QQVGA	HIGH	30	3000

MPEG4

Resolution	Quality	FPS	Max Bit Rate
SXGA / HD720P	HIGH	20	5000
VGA	HIGH	30	3000
QVGA	HIGH	30	3000
QQVGA	HIGH	30	3000

JPEG

Resolution	Quality	FPS
SXGA / HD720P	HIGH	30
VGA	HIGH	30
QVGA	HIGH	30
QQVGA	HIGH	30


Save

Reload

3.3.3 Color


Adjust the color performance from Brightness, Contrast, Hue and Saturation. Click and drag the slider to preview the color change on the right side of this page and adjust the image color.

To restore the default values, click “Back to Default”.

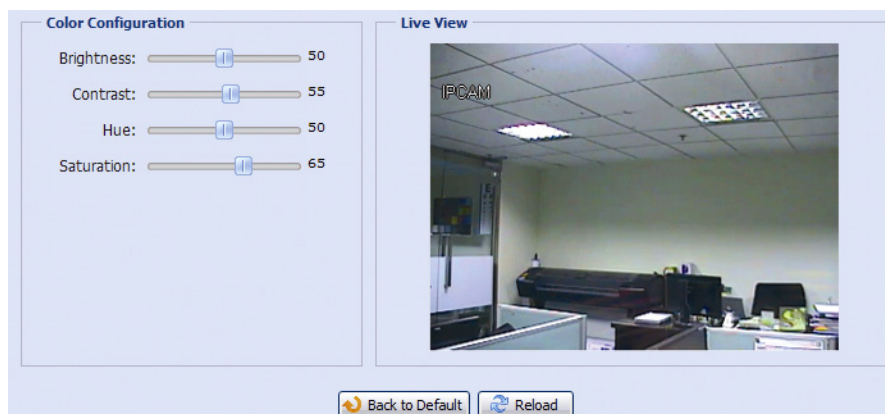

3.3.4 Audio

Drag the slider to adjust the volume of the microphone and speaker.

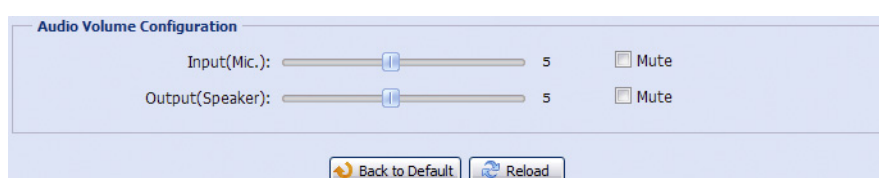


3.3.5 LED

To enable the LED light when the monitoring area is getting dark, select “Yes” in “Auto Enable”.

To schedule the LED light to be on, select “Timer” to enable the schedule and set the day and time.


To specify the day and time to enable the LED light when an external alarm or a motion event occurs, select “External Alarm” or “Motion” to enable this function, and set the day and time.

Note: For the LED light activation to work properly, please go to “Trigger” → “Trigger” to enable external alarm detection or motion detection, and select the LED alert event. For details, please refer to “3.6.1 Trigger” at page 17.

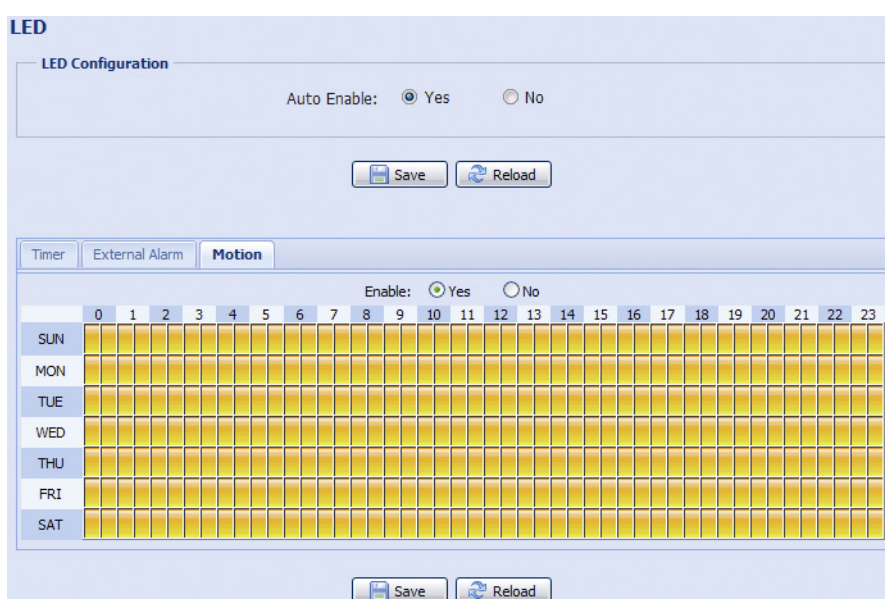

3.3.6 Advanced

Adjust the camera parameters if necessary.

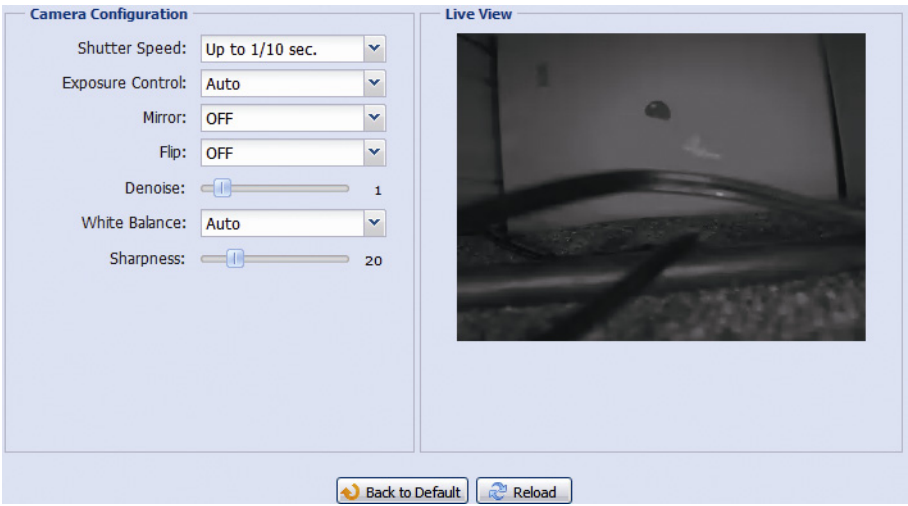

Item	Description
Shutter Speed	Set the shutter speed based on your need. The options are: Up to 1/10 sec, Up to 1/30, Up to 1/15, Up to1/6, Up to 1 and Up to 2.
Exposure Control	This function is used to synchronize the shutter time to the fluorescent light to suppress image flickering.
Mirror	Select “ON” to rotate the images horizontally based on your installation situation when necessary.
Flip	Select “ON” to rotate the image 180° when necessary.
De-noise	Click and drag the slider to adjust the level from 0 ~ 10 to decrease the noise shown in the dark environment.
White Balance	Process the current image to retain color balance over a color temperature range. The options are: Auto, Incandescent Light, Cool Light, sun Light, Cloudy & Sun Shade.
Sharpness	Sharpness enhances the clarity of image detail by adjusting the aperture and sharpening the edges in the pictures. Hold and drag the slider to adjust the level of sharpness from 0 ~ 100. The higher the value, the sharper the image.

3.4 Record


alarm shop

3.4.1 Record

In “Record Configuration”, you can:

- Enable or disable all the record functions, such as manual record, motion record and alarm record. When “Enable” is set to “No”, all record functions are disabled even if you enable any of them in other configuration pages.
- Select if the data should be overwritten when the memory storage is full.
- Enable or disable the audio record function.
- Select the video resolution for event recording: SXGA / HD720P, VGA, and QVGA.
- Set the manual record time in minutes (1 / 5 / 10 / 30 / 60) when you click the manual record icon (📷) on the live page.

Note: The higher resolution you choose, the more accuracy and higher image quality the recording will be, but the faster the memory storage is consumed and become full.

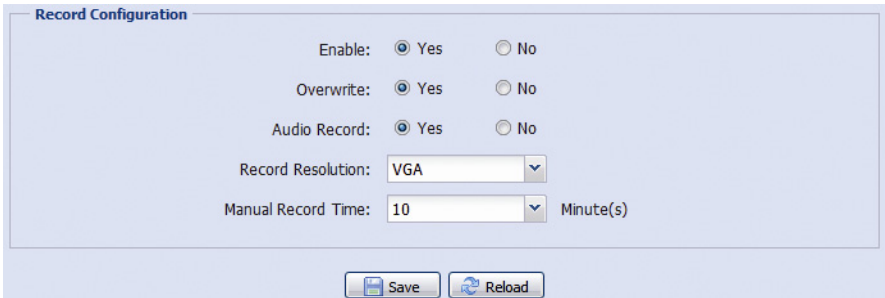

3.4.2 Record Timer

To schedule alarm recording or human detection recording, click “External Alarm” or “Internal Alarm” (human detection) to enable the recording, and select the day and time for recording.

Note: The timer must be enabled for the record function to work properly.

The screenshot shows a web interface for configuring the record timer. It has two tabs: 'External Alarm' and 'Internal Alarm'. Below the tabs is a grid for selecting days (SUN to SAT) and times (0 to 23). The 'Enable' section has radio buttons for 'Yes' (selected) and 'No'. At the bottom are 'Save' and 'Reload' buttons.

3.5 Storage

3.5.1 Memory

In “Memory”, you can check the remaining capacity for recording, or clear all recorded data saved if needed.

Note: The recorded data will be removed also for Model 2 when you reset or reboot this camera.

This camera can only save up to three alarm recordings. To save more recorded data, it's recommended to use this camera with the compatible NVR.

Note: It's available for Model 1 to insert a compatible micro SD card to extend video storage. To know how and where to insert a micro SD card, please refer to “1.7 Micro SD Card” at page 3. To know the compatible list of micro SD cards, please refer to “APPENDIX 3 MICRO SD CARD COMPATIBLE LIST” at page 26.

Note: To know the total recording time per recording resolution, please refer to “APPENDIX 5 RECORDING TIME TABLE” at page 28.

The screenshot shows a web interface for memory configuration. It displays 'File System: RAMDISK', 'Capacity Total: 10.00 MB', and 'Capacity Used: 8.12 MB (81.20%)'. At the bottom are 'Clear' and 'Reload' buttons.

3.6 Trigger

3.6.1 Trigger

You can configure how this camera reacts when there’s an external alarm, a motion or PIR event.

Detect

External Alarm: ON

Motion: ON

PIR: ON

Duration: 10 Sec.

Detection

Action

E-Mail: ☐ External Alarm ☒ Motion ☒ PIR

FTP: ☐ External Alarm ☒ Motion ☒ PIR

Alarm Out: ☒ External Alarm ☒ Motion ☒ PIR

LED Alert: ☐ External Alarm ☒ Motion ☒ PIR ☐ Manual Alarm-Out

Record: ☐ External Alarm ☐ Internal Alarm

Audio Alert: ☒ Manual Alarm-Out

Save

Reload

◆ Detect

Item	Description
External Alarm	Enable or disable detection from external alarm-in device, and click the title “External Alarm” (in blue) to set “N.O.” or “N.C.” depending on the configuration of your alarm-in device.
Motion	Enable or disable motion detection. <i>Motion detection is not supported when the stream format is Motion JPEG.</i> When “ON” is selected, click “Detection” to enter the motion detection area setting page as follows: Detection Configuration Sensitivity: Normal Select All Clear All Save Reload Back Sensitivity: Set the detection sensitivity from the drop-down list: High, Normal or Low. Area Setting: Set the motion detection area by selecting the area grids with your mouse. Pink grids represent the area that is not being detected while the transparent grids are the area under detection. You can set multiple areas under detection. Click “Clear All” to set the whole area undetected. Click “Select All” to set the whole area under detection.
PIR	Enable or disable human detection.
Duration	Set the duration time for trigger recording (5 / 10 / 20 / 40 seconds).

◆ Action

Here defines how the camera delivers alerts to you for any event.

Item	Description
E-Mail	Select the event type you want to receive E-mail notifications when it occurs. Then, click the title “E-Mail” (in blue) to configure the media type (H264 / JPEG / MPEG4), file format (AVC / AVI), and record time (1 ~ 5 seconds) for the event video clip. The camera will send the captured video clip to the E-mail address(s) you assigned in “Network” → “Mail” once the selected event type occurs.
FTP	Select the event type you want to receive FTP notifications when it occurs. Then, click the title “FTP” (in blue) to configure the media type (H264 / JPEG / MPEG4), file format (AVC / AVI), and record time (1 ~ 5 seconds) for the event video clip. The camera will upload the captured video clip to the FTP site you assigned in “Network” → “Mail” once the selected event type occurs.
Alarm Out	Select the event type you want to trigger the alarm-out device to work when it occurs. Then, click the title “Alarm Out” (in blue) to configure the trigger rule (LOW / HIGH).

Item	Description
LED Alert	Select the event type you want to enable the LED light when it occurs. <i>For "External Alarm" and "Motion", make sure you also enable the schedule timer in "Camera" → "LED". For details, please refer to "3.3.5 LED" at page 14.</i>
Record	Select the event type you want to enable event recording when it occurs.
Audio Alert	Select the event type you want to enable audio alert when it occurs.

3.6.2 Push Video

"Push Video" is an active notification system, different from traditional FTP and Email notification methods.

Note: For Push Video to work properly, make sure the record function is on in "Record" → "Record", and the record timer for the external alarm is on in "Record" → "Record Timer".

Push Video configuration window showing the following settings:

- Guard: ☒ Enable ☐ Disable
- LED Lock: ☒ Enable ☐ Disable
- Slow Shutter Lock: ☒ Enable ☐ Disable
- Guard Rule: Internal Alarm OR External Alarm
- Message: Push Video Alarm!

Buttons: Save, Reload

Item	Description
Guard	Select to enable or disable Push Video. This function can also be enabled from your iPhone or Android mobile devices.
LED Lock	Select to fix the LED light mode to auto (Enable) or remain the current LED light mode (Disable) when Push Video is enabled. When this function is enabled, it could ensure Push Video recording to get enough light when the environment is dark. This function is set to "Enable" by default.
Slow Shutter Lock	Select to fix the slow shutter level to level 2 (Enable) or remain the current slow shutter level (Disable) when Push Video is enabled. When this function is enabled, it could ensure Push Video recording to get clear images when the environment is dark. This function is set to "Enable" by default.
Guard Rule	Select the rule to enable Push Video from "External Alarm", "Internal Alarm", or "Internal Alarm OR External Alarm". - External Alarm – The alarm device additionally connected to your camera - Internal Alarm – The human detection function built in this camera This function is set to "Internal Alarm OR External Alarm" by default.
Message	Define the context when you receive the Push Video message on your iPhone or Android mobile device. Up to 28 characters are allowed.

To schedule when to enable or disable Push Video, please enable the Push Video timer, and select and day and time to enable this function.

Push Video Timer Configuration window showing the following settings:

- Enable: ☒ Yes ☐ No
- Calendar grid: Shows days of the week (SUN to SAT) and hours (0 to 23). Yellow cells indicate enabled periods, and white cells indicate disabled periods.

Buttons: Save, Reload

3.7 General

3.7.1 General

To change the language of UI interface, select from the drop-down list in “Language”.

To allow the status LED indicators to show the status as indicated in “1.6 Status Indicator” at page 2, select “ON” “Enable” in “Status LED Mode”; to hide the status, select “OFF”; to only show the error status, select “Temporary Disable”.

Note: The status LED mode will be restored to “Enable” after camera reboot when “Temporary OFF” is selected.

To lock camera access when it’s not used after the specified time, select “5 MIN”, “15 MIN” or “30 MIN” from the drop-down list of “Auto Lock Time”, or select “NEVER” to disable this function.

Note: When the camera access is locked after the specified time, to resume camera access, please enter the password.

General

General Configuration

Language:

English

Status LED Mode:

Enable

Auto Lock Time:

15 MIN

MAC Address:

00:0E:53:E6:29:B3

Save

Reload

3.7.2 Time

Set daylight saving time and the current time, and click “Save” to confirm.

Time

Time Configuration

OSD:

Enable

Disable

Date:

2011/08/30

Time:

21

:

16

:

41

Save

Reload

Daylight Saving Time

Daylight Saving Time Configuration

Daylight Saving Time:

Enable

Disable

Start Time:

August

First Week

Monday

6

:

0

(HH:MM)

End Time:

October

Fifth Week

Monday

10

:

0

(HH:MM)

Adjust Time:

1

:

0

(HH:MM)

Save

Reload

Function	Description
■ Time Configuration	
Date	Set the current date.
Time	Set the current time.
■ Daylight Saving Time Configuration	
Daylight Saving Time	Specify whether to use daylight saving time (Enable / Disable).
	If this function is enabled, set the time period (Start Time / End Time), and adjust the daylight saving time in hours (Adjust Time).

3.7.3 Server Log

To quickly search the system logs you want by event type, click “Prev. Page” or “Next Page” to find the logs you want, or check the event type(s) and click “Reload” to start searching.

To clear all system event logs, click “Clear All”.

Server Log List

No.	Event	Time	Result
1	Remote Login	2011/08/30 20:54:41	admin
2	Remote Login	2011/08/30 20:29:58	admin
3	Remote Login	2011/08/30 18:22:08	admin
4	SNTP Update	2011/08/30 18:20:06	Failed
5	Remote Login	2011/08/30 18:20:03	admin
6	Power On	2011/08/30 18:19:24	ON
7	Power On	2011/08/30 18:18:46	OFF
8	Remote Login	2011/08/30 18:11:21	admin
9	Remote Login	2011/08/30 18:11:18	admin
10	Remote Login	2011/08/30 18:07:10	admin
11	Remote Login	2011/08/30 18:03:19	admin
12	Remote Login	2011/08/30 18:02:15	admin
13	Remote Login	2011/08/30 18:02:07	admin
14	Remote Login	2011/08/30 18:01:51	admin
15	Remote Login	2011/08/30 17:57:01	admin
16	Remote Login	2011/08/30 17:56:55	admin
17	Remote Login	2011/08/30 17:56:53	admin
18	Remote Login	2011/08/30 17:54:44	admin
19	SNTP Update	2011/08/30 17:50:48	Failed
20	Power On	2011/08/30 17:50:07	ON

Prev. PageNext PageReload

Clean All

3.7.4 Online

You can check the current online user(s) with respective online information. To refresh the list, click “Reload”.

- To allow anonymous login, select “Enable” in “Anonymous Viewer Login”.
- To disable image code verification at login, select “No” in “Login with CAPTCHA Image”.

Online Configuration

Anonymous Viewer Login: ☐ Enable ☒ Disable

Login with CAPTCHA Image: ☐ Yes ☒ No

Max Online User:

Username	IP Address	User Level	Media Type
admin	211.75.84.96	SUPERVISOR	H264
admin	60.248.97.4	SUPERVISOR	H264

Reload

SaveReload

3.7.5 Account

You can create a new account with different user access privilege, or delete or modify an existing account setting.

How to create a new account

Step1: Click “New”, and fill in the following columns.

The screenshot shows the 'Account' management window. It contains a table with columns: Username, User Level, and Life Time. The table lists four accounts: admin (SUPERVISOR, INFINITE), power (POWER USER, 1 HOUR), normal (NORMAL USER, 4 HOUR), and guest (GUEST, 1 HOUR). A 'New Account Info' dialog box is open in the center, with fields for Username (office), Password (*****), Confirm Password (*****), User Level (POWER USER), and Life Time (1 HOUR). At the bottom of the dialog are 'Save' and 'Close' buttons. A red arrow points to the 'Add' button at the bottom left of the main window.

Column	Description
User Name	Set a user name that will be used for camera access. The user name allows up to 16 alphanumeric characters.
Password	Set the password that will be used for remote login. The password allows up to 16 alphanumeric characters.
Confirm Password	Enter the password again to confirm.
User Level	Set the security level of an account to give the permission to control different functions. There are four user levels: SUPERVISOR, POWER USER, NORMAL USER and GUEST.
Life Time	Select how long this account is allowed to stay online (1 MIN / 5 MIN / 10 MIN / 1 HOUR / 1 DAY / INFINITE)

Step2: Then, click “Save” to save your setting and create a new account.

How to modify or delete an existing account

Step1: Select the account you want to modify or delete.

Step2: To modify the account, click “Edit” to change the settings, and click “Save”.
To remove the account, click “Delete”.

Note: It's not allowed to remove an account when there's only one account in the account list.

3.7.6 Maintenance


Firmware Upgrade

This function is used when users need to upgrade the camera for function scalability.

Note: Before using this function, make sure you have the correct upgrade files provided by your installer or distributor.

Note: The event videos saved in the camera will be removed after firmware upgrade. Make sure you've copied important events to your PC before firmware upgrade.

Step1: Select “” to browse to where you save the upgrade files, and select them one by one until all files are selected (up to four files).

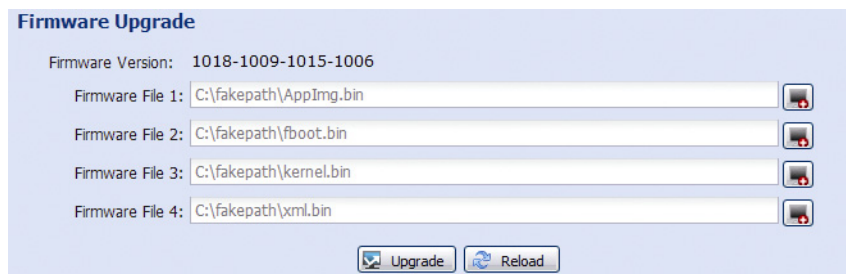

The 'Firmware Upgrade' window shows the current firmware version as 1018-1009-1015-1006. It contains four file input fields, each with a file explorer icon to its right. The files listed are: Firmware File 1: C:\fakepath\AppImg.bin, Firmware File 2: C:\fakepath\fbboot.bin, Firmware File 3: C:\fakepath\kernel.bin, and Firmware File 4: C:\fakepath\xml.bin. At the bottom, there are 'Upgrade' and 'Reload' buttons.

Step2: Select “Upgrade” to start system upgrading.


Note: It takes a few minutes to finish the upgrade process. Do not disconnect the power during firmware upgrade, or the upgrade may be failed. The camera will reboot after the upgrade.

System Configuration Backup

This function is used to copy your system configuration to a “System.bin” file.

You may import the same system configuration to another camera, or restore your system configuration when the camera is reset to default values.


Select “System.bin” in “Firmware Upgrade”, and select “Upgrade” to import the system configuration.



The 'System Configuration Backup' window contains a text instruction: 'If you want to backup your system configuration before upgrade firmware version, click 'Backup' to start the backup process.' Below the text is a 'Backup' button with a red arrow icon.

System Reboot


Select “Reboot” to restart your camera if needed.



The 'System Reboot' window contains a text instruction: 'If you want to reboot your system , click 'Reboot' to start the system reboot.' Below the text is a 'Reboot' button with a red arrow icon.

Player Download

To see the event video clips downloaded to your PC, you need to first install our own video player in your PC. Select “Free Download” to download the video player, and double click the file to install it.



The 'Player Download' window contains a text instruction: 'If you want to open the video downloaded from playback. Please download and install the player at first.' Below the text is a 'Free Download' button with a red arrow icon.

APPENDIX 1 PRODUCT SPECIFICATIONS

	Model 1	Model2
■ Network		
LAN Port	YES	
LAN Speed	10/100 Based-T Ethernet	
Wireless Interface	IEEE 802.11b/g/n	
Antenna Gain	2dBi	
RF Connector	Reverse SMA Plug	
Supported Protocols	DDNS, PPPoE, DHCP, NTP, SNTP, TCP/IP, ICMP, SMTP, FTP, HTTP, RTP, RTSP, RTCP,IPv4, Bonjour, UPnP, DNS, UDP, IGMP	
Number of Online Users	10	
Security	(1) Multiple user access levels with password (2) IP address filtering (3) HTTPS encryption (4) WEP 64/128 bit, WPA/WPA2-PSK	
Remote Access	(1) Internet Explorer® on Windows® operating system (2) EagleEyes on iPhone, iPad & Android mobile devices	
■ Video		
Video Compression	H.264 / MPEG4 / MJPEG	
Video Resolution	SXGA, 720P, VGA, QVGA	
Frame Rate	NTSC:30, PAL:25	
Multiple Video Streaming (Encode Modes, IPS, Resolution)	3 (H.264, MJPEG, MPEG4)	
■ Camera		
Image Sensor	1/4" SONY H.R. image sensor	
Min Illumination	0.1 Lux / F1.5, 0 Lux (White LED on)	
Shutter Speed	1 / 2 to 1 / 10,000 sec.	
S/N Ratio	More than 48dB (AGC off)	
Lens	f3.8mm / F1.5	
Viewing Angle	62.7°	
White LED	YES (1W, 10 meters)	
White Balance	ATW	
AGC	Auto	
IRIS Mode	AES	
PIR Sensor	Detection Range 76° wide angle with up to 6m long distance at 2m height (under 30°C)	
External Alarm I/O	YES	
Microphone	YES	
Speaker	YES	
Power Source (±10%)	5V / 2A	
Operating Temperature	0°C~40°C	
■ Others		
Mobile Surveillance	iPad / iPhone / Android mobile device	
Quick Wireless Network Connection	YES (With one press)	
RTC (real-time clock)	YES	
Motion Detection	YES	
Digital Pan / Tilt / Zoom	YES	
Event Notification	FTP / Email / Push Video	
Micro SD Card Slot	YES	NO
Minimum Web Browsing Requirements	• Pentium 4 CPU 1.3 GHz or higher, or equivalent AMD • 256 MB RAM • AGP graphics card, Direct Draw, 32MB RAM • Windows 7, Vista & XP, DirectX 9.0 or later • Internet Explorer 7.x or later	

** The specifications are subject to change without notice.

** Dimensional tolerance: ± 5mm


APPENDIX 2 BIT RATE TABLE FOR REFERENCE

The data below is for reference only.

The bit rates listed here may vary depending on the resolution, image quality & frame rate you choose, the complexity of your monitoring area, and how often the moving objects show in your monitoring area.

Testing Environment

- Place: Office Entrance
- Network translation: H.264
- Camera type: Megapixel camera

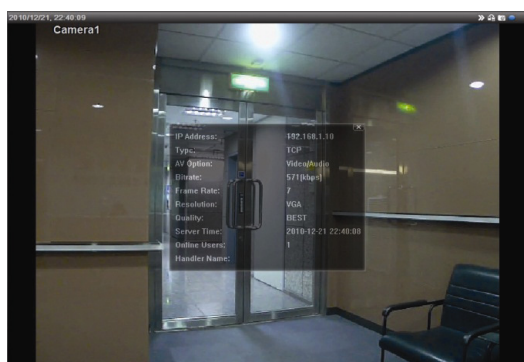

Static: No one coming in and out



Dynamic: One or two people coming in and out

Resolution	Quality	Frame Rate	(Dynamic) kbps	(Static) kbps
SXGA	Best	FULL	3253	3216
	High		2375	2160
	Normal		1571	1266
	Basic		1465	873
VGA	Best		2010	1261
	High		1042	1034
	Normal		685	572
	Basic		457	350
QVGA	Best		646	366
	High		482	350
	Normal		302	286
	Basic		168	161
SXGA	Best	1/4	1163	1076
	High		989	715
	Normal		855	534
	Basic		719	443
VGA	Best		789	571
	High		451	447
	Normal		349	237
	Basic		217	165
QVGA	Best		269	147
	High		182	131
	Normal		164	113
	Basic		97	71

Resolution	Quality	Frame Rate	(Dynamic) kbps	(Static) kbps
SXGA	Best	1/15	581	374
	High		405	342
	Normal		487	248
	Basic		337	141
VGA	Best		358	79
	High		201	63
	Normal		180	28
	Basic		92	15
QVGA	Best		111	84
	High		99	68
	Normal		97	54
	Basic		58	42

alarm shop

APPENDIX 3 MICRO SD CARD COMPATIBLE LIST

Manufacturer	Capacity	Class	Manufacturer	Capacity	Class
ADATA	2GB	--	Transcend	2GB	--
	4GB	Class 6		4GB	Class 2
Apacer	2GB	--		4GB	Class 4
	4GB	Class 4		4GB	Class 6
SanDisk	2GB	--		8GB	Class 6
	4GB	Class 4		16GB	Class 10
	8GB	Class 4	Kingston	2GB	--
	16GB	Class 4		4GB	Class 4
	32GB	Class 4		8GB	Class 4
Verico	2GB	--		32GB	Class 4
	4GB	Class 4	TOSHIBA	16GB	Class 4
	16GB	Class 10	TOPRAM	32GB	Class 10

alarm shop

APPENDIX 4 Q&A

For more details about EagleEyes Q&A, please visit our official website: www.eagleeyescctv.com.

Question	Answer
I can connect to this camera in my house or office where it's installed with wireless network. But when I leave my house or office, I can't connect to it from my mobile phone (with 3G network), or other PC (connected to Internet). Why?	You didn't configure this camera to Internet, but only in LAN. Please follow the steps in the advanced network setup guide downloadable from www.surveillance-download.com/user/n812.swf to complete network configurations, or it's recommended for you to check with your local installer or reseller for this service because it's usually hard for a person who doesn't have network knowledge to set network configurations.
My live images are not fluent. Why?	There are two suggestions to improve the image fluency as listed below: 1) Image fluency is affected by the local network upload bandwidth, router efficiency, client network download bandwidth, complexity of live view, and more. (Recommended) To have the best image fluency, select "QVGA"; to have the best image quality, select "SXVGA"; to have normal image fluency and quality, select "VGA" 2) This camera series supports IEEE 802.11b/g/n interface. When in b Mode, delayed live view may be caused if two people or more log into the camera at the same time. In this case, it's recommended to switch to the other modes (g mode / n mode).
What's "Push Video"?	"Push Video" is an active notification system, different from traditional FTP & Email notification methods. When "Push Video" is enabled and any human detection event occurs, you'll be able to receive notifications on your iPhone / iPad / Android mobile device within 5 seconds. For more details about "Push Video", please refer to "Advanced Network Setup" (APPENDIX3 ENABLE PUSH VIDEO).
The detection range of the built-in human detection sensor seems too short and the sensor is not sensitive enough. Did I do anything wrong on installation?	The human detection sensor might be influenced by the temperature of ambient environment and human beings, and the applicable working temperature is up to 30°C. To get more accurate and precise detection, you may connect external alarm devices, such as magnetic contacts.
The live video keeps flickering. Why?	Please try adjusting the power line frequency to "60 Hz" or "50 Hz" for the camera. For iPhone / iPad users, access the camera, and select  on the top right corner to enter IPCAM Configuration page. Then, scroll down and select "Advanced". Go to "Advanced Setup" → "Camera" to change setting. For access from Internet Explorer, log into the camera, and select "Config." → "Camera" → "Camera".

APPENDIX 5 RECORDING TIME TABLE

Below shows the estimated total recording time for each recording resolution.

The recording time per resolution is the average value collected from the both alarm trigger conditions indicated in “Testing Environment”, and is for reference only.

The time may vary depending on the resolution, image quality & frame rate you choose, the complexity of your monitoring area, and how often the moving objects show in your monitoring area.

Testing Environment

- Place: Office
- Monitoring area: 1.5 meters away from the camera
- Alarm trigger conditions:
 - (1) One person walks by the monitoring area and leaves immediately.
 - (2) Two persons walk by the monitoring area. One goes away immediately, and the other one stays a while and goes away.

Recording Resolution	SXGA	VGA	QVGA
Recording time (second)	25	115	211

alarm shop